



Technology | Document Management | Consulting Services

## **Recommended Xerox Media for Phaser 6300N, 6300DN, 6350DP, 6350DT, and 6350DX (Europe)**

### **Revision 5.0 August, 2007**

Last Revision Feb 2007

This supersedes any previous Recommended Media for Xerox Phaser 6300N, 6300DN, 6350DP, 6350DT, and 6350DX list.

#### **Important Note:**

All media are listed by product, Paper Type System Setting, Paper Type, weight (standard gsm), re-order number, size, and tray runability. The additional information column is for hints and tips on how to run certain media applications.

Media recommendations made in this publication are based on qualification tests\* conducted using standard test images with moderate to heavy image area coverage. Test duration for each product/media type is based on the suggested machine monthly copy/print volume. Test machines are maintained within specifications defined by user documentation.

\*Testing environment Temperature 20 degreesC±4, Relative Humidity 40% ±10%.







\*Machine reliability specifications may be affected by increased usage of the Transparency, Card Stock, Label, and Special modes. In addition, variances in machine reliability may occur due to extended use of some media types. Your Xerox service representative can advise you on special application media types for long duration copy/print runs.

For specifications and a description of the various media types discussed in this publication, please refer to [www.Xerox.com](http://www.Xerox.com).

For additional recommended Phaser media, look under Supplies on: <http://www.office.xerox.com/> and select your Product Family.

© 2005 Xerox Corporation. All rights reserved.



Xerox®, The Document Company®, the stylized X®, and all Xerox product names and product names and product numbers mentioned in this publication are trademarks of Xerox Corporation. Other company trademarks are also acknowledged.

Plain	
Heavy Plain	
Thin Card	
Glossy Coated	
Transparency	
Thick Card	
Label	

**Phaser 6300N,  
6300DN, 6350DP,  
6350DT, and 6350DX  
revision 5.0**

A=Auto Duplex  
M=Manual Duplex  
S=Simplex Only

Paper	Paper Type	Weight	Re-Order #	Cross Reference #	Type	Size	Trays					Additional Information
							1/MPT	2	3	4	5	
Xerox Digital Colour Colotech+ Gold	Plain	90 gsm	3R97988			A4	A	A	A	A	A	Refer to the "Paper Tips" embedded page for additional printer-specific information, e.g., High Capacity tray usage.
	Heavy Plain	100 gsm	3R97993			A4	A	A	A	A	A	Paper Type <i>Plain</i> should be selected on the user interface for Trays/MPT. For higher print gloss, use the <i>Heavy Plain</i> setting.
	Heavy Plain	120 gsm	3R97958			A4	A	A	A	A	A	Paper Type <i>Heavy Plain</i> should be selected on the user interface for Trays/MPT.
	Thin Card	160 gsm	3R97963			A4	A	A	A	A	A	Paper Type <i>Thin Card</i> should be selected on the user interface for Trays/MPT.
	Thick Card	200 gsm	3R97967			A4	M					Paper Type <i>Thick Card</i> should be selected on the user interface for Trays/MPT. Environmental condition may require that this product be fed one sheet at a time.
Xerox Digital Colour Colotech+	Plain	90 gsm	3R94641			A4	A	A	A	A	A	Paper Type <i>Plain</i> should be selected on the user interface for Trays/MPT. For higher print gloss, use the <i>Heavy Plain</i> setting.
	Heavy Plain	100 gsm	3R94646			A4	A	A	A	A	A	Paper Type <i>Heavy Plain</i> should be selected on the user interface for Trays/MPT.
	Heavy Plain	120 gsm	3R94651			A4	A	A	A	A	A	Paper Type <i>Heavy Plain</i> should be selected on the user interface for Trays/MPT.
	Thin Card	160 gsm	3R94656			A4	A	A	A	A	A	Paper Type <i>Thin Card</i> should be selected on the user interface for Trays/MPT.
	Thick Card	200 gsm	3R94661			A4	M					Paper Type <i>Thick Card</i> should be selected on the user interface for Trays/MPT. Environmental condition may require that this product be fed one sheet at a time.
Xerox Digital Colour Impressions	Plain	90 gsm	3R97663			A4	A	A	A	A	A	Paper Type <i>Plain</i> should be selected on the user interface for Trays/MPT. For higher print gloss, use the <i>Heavy Plain</i> setting.
Xerox Business	Plain	80 gsm	3R91820			A4	A	A	A	A	A	Paper Type <i>Plain</i> should be selected on the user interface for Trays/MPT.

Plain	
Heavy Plain	
Thin Card	
Thick Card	
Glossy Coated	
Label	
Transparency	

**Phaser 6300N,  
6300DN, 6350DP,  
6350DT, and 6350DX  
revision 5.0**

A=Auto Duplex  
M=Manual Duplex  
S=Simplex Only

Paper	Paper Type	Weight	Re-Order #	Cross Reference #	Type	Size	Trays					Additional Information
							1/MPT	2	3	4	5	
Xerox Premier	Plain	80 gsm	3R91720			A4	A	A	A	A	A	Paper Type <i>Plain</i> should be selected on the user interface for Trays/MPT.
	Thin Card	160 gsm	3R91798			A4	A	A	A	A	A	Paper Type <i>Thin Card</i> should be selected on the user interface for Trays/MPT.
Xerox Performer	Plain	80 gsm	3R90649			A4	A	A	A	A	A	Paper Type <i>Plain</i> should be selected on the user interface for Trays/MPT.
Xerox Excel	Plain	80 gsm	3R91700			A4	A	A	A	A	A	Paper Type <i>Plain</i> should be selected on the user interface for Trays/MPT.
Xerox Recycled	Plain	80 gsm	3R91165			A4	A	A	A	A	A	Paper Type <i>Plain</i> should be selected on the user interface for Trays/MPT. Performance may vary at extremes in humidity.
Xerox Digital Colour Colotech+ Gloss	Glossy Coated	140gsm	3R97577			A4	A	A	A	A	A	Paper Type <i>Glossy Coated</i> should be selected on the user interface. Environmental condition may require that this product be fed one sheet at a time. Gloss variation can occur from machine rolls, especially on high area coverage prints.
	Thick Card	210gsm	3R97583			A4	M					Paper Type <i>Thick Card</i> should be selected on the user interface. Environmental condition may require that this product be fed one sheet at a time. Gloss variation can occur from machine rolls, especially on high area coverage prints.
Xerox Trifold Brochures	Thin Card	176 gsm	3R97946	103R01019		A4	M					Paper Type <i>Thick Card</i> should be selected on the user interface for Tray1/MPT.
Xerox Premium Business Cards	Thick Card	195gsm	3R97512			A4	M					Paper Type <i>Business Card</i> should be selected on the user interface for Tray1/MPT.
Xerox Colour Laser/ Copier Labels	Label		3R93872			A4	S	S	S	S	S	Paper Type <i>Labels</i> should be selected on the user interface for Trays/MPT.
			3R93873			A4	S	S	S	S	S	
			3R93874			A4	S	S	S	S	S	
			3R93875			A4	S	S	S	S	S	
Xerox Phaser™ 25-Series Premium Transparencies	Transparency		3R95316	016-1949-00		A4	S	S	S	S	S	Paper Type <i>Transparency</i> should be selected on the user interface for Trays/MPT. It is not recommended to output more than 20 transparencies at a time.

**WARRANTY DISCLAIMER**

Xerox makes no guarantees or warranties, either express or implied, concerning the performance, use or replacement of non-Xerox branded media or throughput products. Customers should inquire directly of their paper distributor or manufacturer for any guarantees they may offer. When purchasing a particular media product for the first time, customers are advised to purchase small quantities to insure that their expectations are met.

The quality of Xerox supplies is consistent from ream to ream, carton to carton, and it is backed by a Xerox 100% guarantee. The quality of non-Xerox branded paper may vary from ream to ream or carton to carton, so for optimum performance on Xerox color equipment, use only the best-Xerox Supplies.

© 2005 Xerox Corporation. All rights reserved.

Xerox®, The Document Company®, the stylized X®, and all Xerox product names and product names and product numbers mentioned in this publication are trademarks of Xerox Corporation. Other company trademarks are also acknowledged.

